


LX-17 EXPLODED VIEW

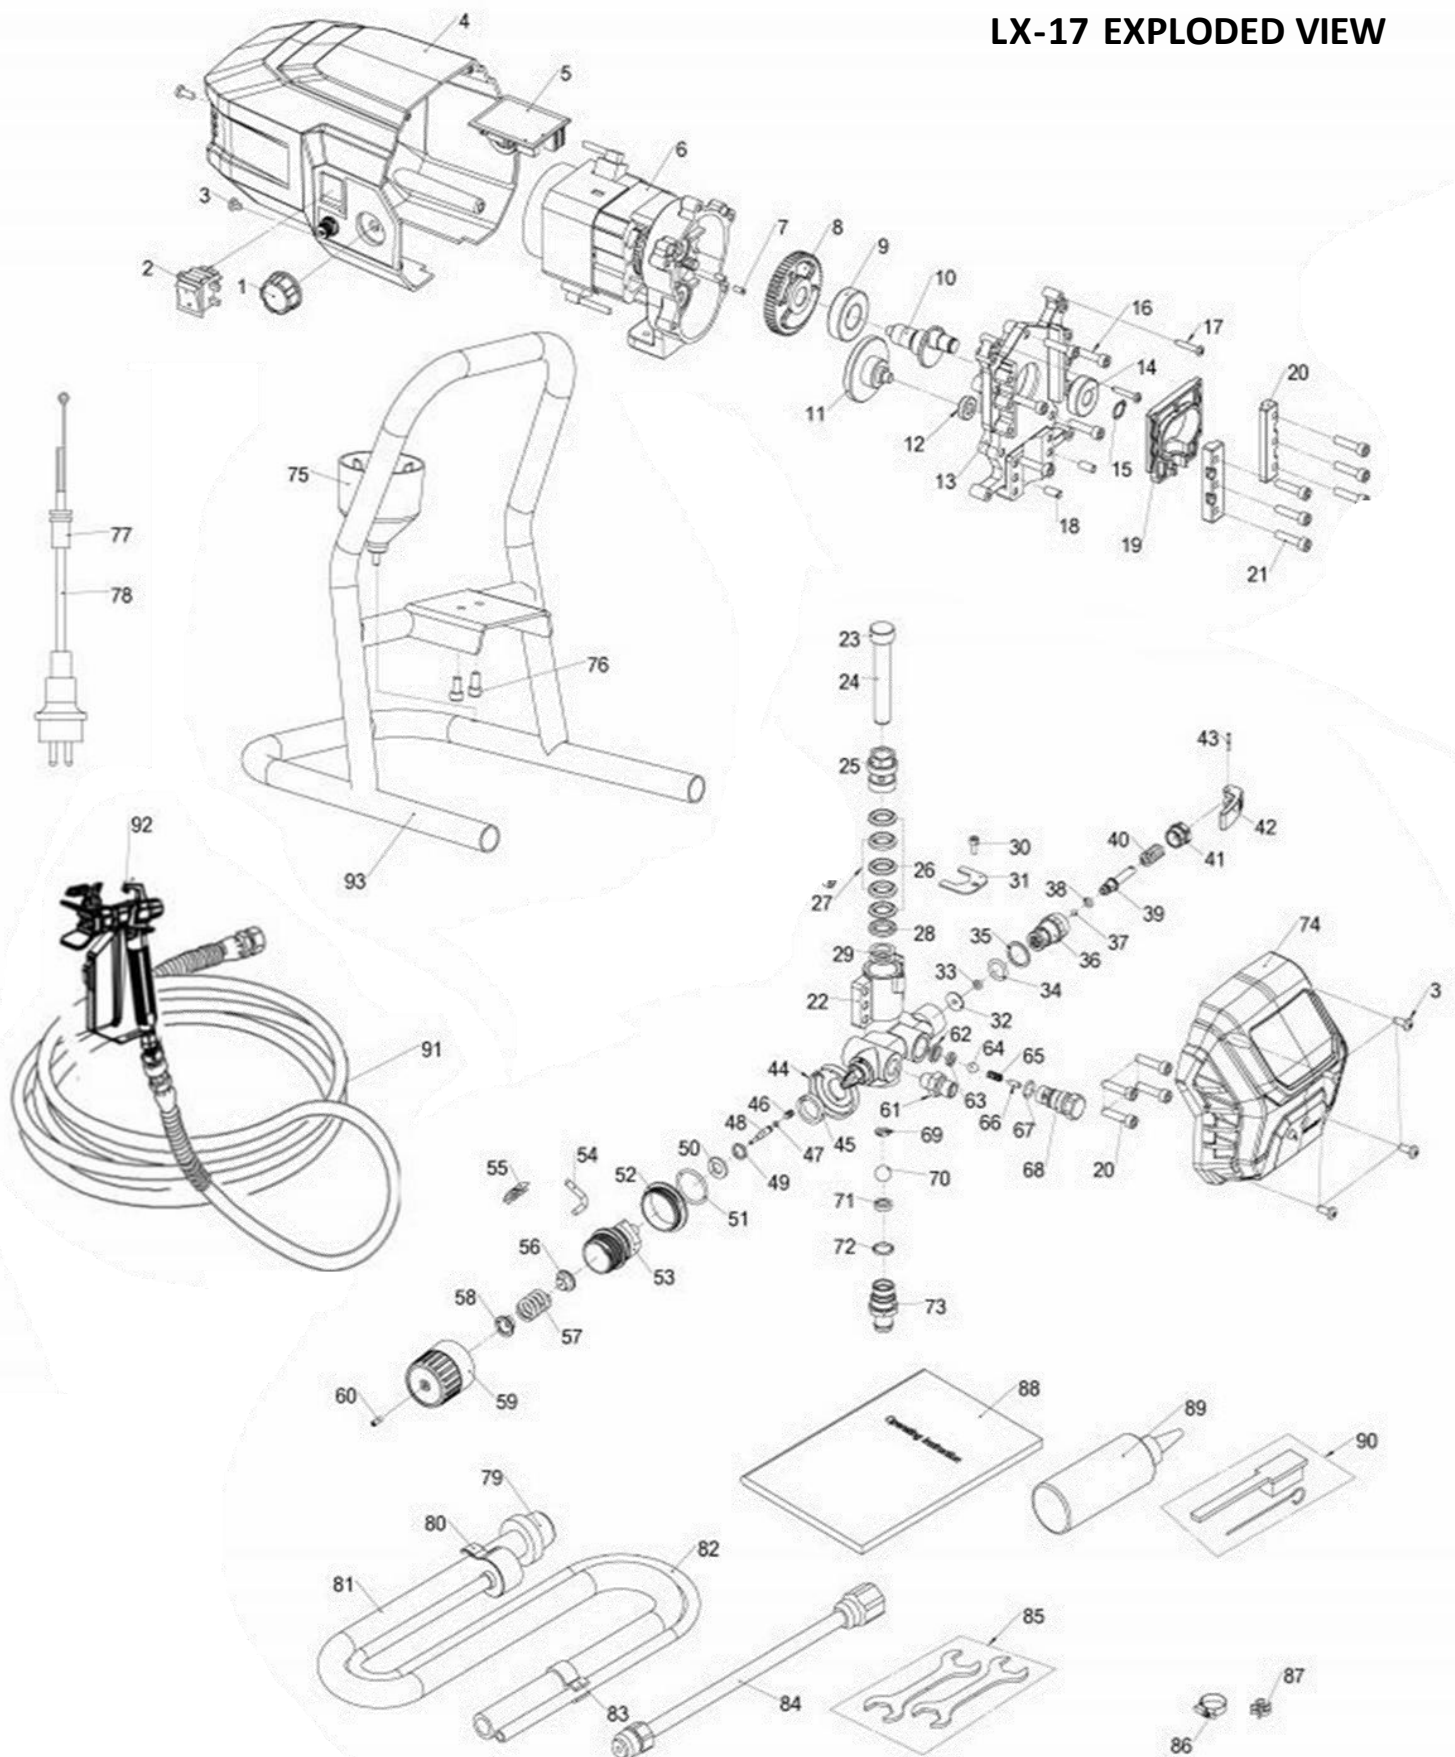

Spare Parts List LX-17



No.	Code	Description	QTY
1	L047-100	Knob	1
2	L047-101	ON/OFF switch	1
3	L047-102	Screw	6
4	L047-103	Rear cover	1
5	L047-104	Circuit board 110V	1
6	L047-105	Motor 110V	1
7	L047-106	Pin $\phi 4$	2
8	L047-107	Big Gear	1
9	L047-108	Bearing	1
10	L047-109	Crankshaft	1
11	L047-110	Gear	1
12	L047-111	Bearing	1
13	L047-112	Gearbox Front Cover	1
14	L047-113	Bearing	1
15	L047-114	C-Clip	1
16	L047-115	Screw	5
17	L047-116	Screw	2
18	L047-117	Pin $\phi 6$	2
19	L047-118	Connecting Rod	1
20	L047-119	Platen	2
21	L047-120	Screw	10
22	L047-121	Pump body	1
23~24	L047-122	Piston rod	1
25	L047-123	Sleeve	1
26	L047-124	V-packing 1	3
27	L047-125	V-packing 2	2
28	L047-126	Seal Support Seat	1
29	L047-127	Wave- Spring	2
30	L047-128	Screw	1
31	L047-129	Bushing retainer	1

No.	Code	Description	QTY
32~43	L047-130	Prime/spray vave	1
44	L047-131	Cover	1
45	L047-132	Support Ring	1
46~60	L047-133	Pressure regulator	1
61	L047-134	Nipple 1/4"	1
62~68	L047-135	Outlet valve	1
69	L047-136	Spring	1
70	L047-137	Ball, inlet valve	1
71~73	L047-138	Inlet valve	1
74	L047-139	Front cover	1
75	L047-140	Cup	1
76	L047-141	Screw	2
77	L047-142	Clip	1
78	L047-143	Power cable	1
79	L047-144	Suction filter	1
80	L047-145	Clip	1
81	L047-146	Suction tube	1
82	L047-147	Return tube	1
83	L047-148	Clip	1
84	L033-071	Extension pole 30cm	1
85	L047-149	Wrench	2
86	L047-150	Clamp	1
87	L047-151	Clamp	1
88	L047-152	manual	1
89	L034-125	Lubricating oil	1
90	L015-608	Cleaning brush	1
91	L031-078	High Pressure hose 1/4"x 25'	1
92		Spray gun	1
93	L047-153	Base frame	1
23~28	L047-154	Packing kit	1
23~73	L047-155	Fluid section CPL.	1
79-83	L047-156	Suction hose assy	1